




Service Sheet — How to fit a set of Brake Pads

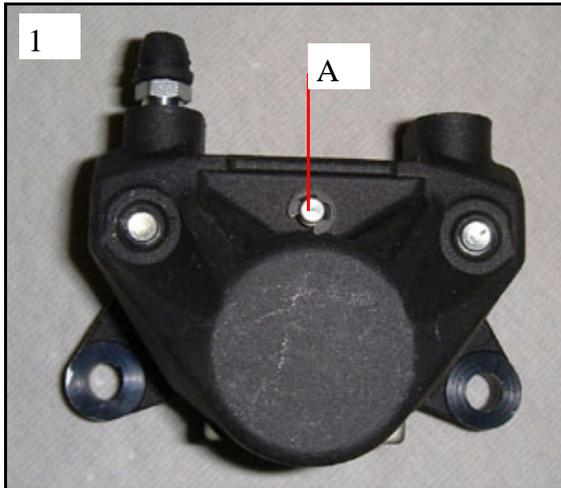



The Caliper does not need to be Removed from the carriage :

1. Remove circlip (A)

Take care not to loose it !

2. With a pair of pliers pull pin (B) out sideways

This will release the anti—vibration spring and the pads (D)

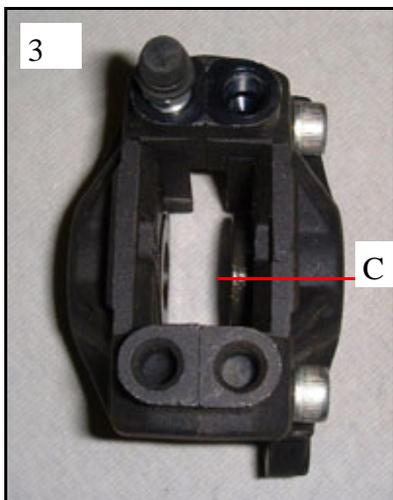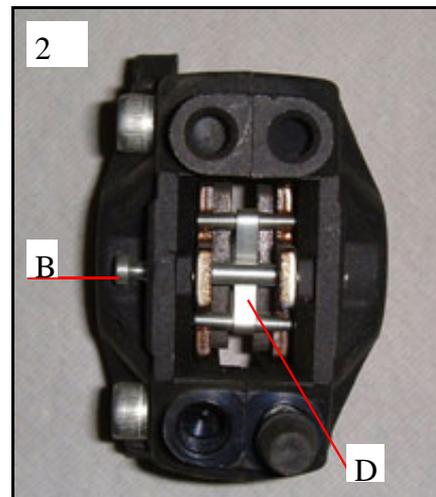

3. With a tool narrow enough to fit between the disc and caliper (e.g a screw driver) push the pistons (C) back until there is room to slide the pads in (1 each side)
4. Replace and re-assemble in reverse order ensuring anti-vibration spring is under the pin (Picture 2)